

DESIGNATION OF GAS MASK

Filtering gas mask PMG for grown-ups is designed to protect respiratory organs, eyes, faces from radioactive, poison and bacteriological admixtures.

GAS MASK SET

Gas mask PMG set contains:

1. Mask
 - 1a. Eyepieces
 - 1b. FAC attachment unit
 - 1c. Valve unit
 - 1d. Intercom
2. Filtering and absorbing canister (FAC)
3. Carrier bag
4. Non-perspired films

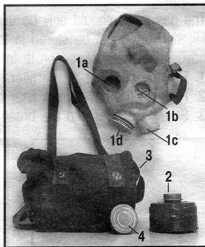


Fig.1.

SELECTION OF SIZE OF THE GAS MASK

The gas mask can be used as a reliable protecting device in case size of its mask is selected properly and the gas mask as a whole is adjusted correctly. Size of the gas mask is shown on chin part of the full mask. To select properly size of the full mask it is necessary to measure a head around the circumference which runs through top, chin and cheeks; measurements are rounded off to 0.5 cm / 0.2' (see Fig.2).



Fig.2.

Measurement, cm / inch	Required gas mask size
62.5 - 65.5 / 24.6' - 25.8'	1 or S
66 - 67.5 / 26' - 26.6'	2 or M
68 - 69 / 26.8' - 27.2'	3 or L
69.5 / 27.4' and more	4 or XL

USE OF THE GAS MASK

The gas mask should only be used upon specific orders given through mass media. Filtering box must be stored in the carrier bag, plug must be inserted into the box and cover must be screwed on it. In case of attack proceed in the following way:

1. Pull the plug out of the filter.
2. Remove the cover from filter by turning counter-clockwise.
3. Screw the filter into the breathing valve by turning clockwise.



Fig.3. a b c

Upon receipt of the specific order given through mass media proceed in the following way (see Fig.3):

1. Hold your breath, close your eyes.
2. Take the gas mask out from the carrier bag.
3. Take lower thickened part of full mask using both hands (thumbs must be outside) (see Fig.3a).
4. Put lower part of the mask under the chin (see Fig.3b).
5. Pull the mask on the head, moving upper part of the headpart on the back of the head (see Fig.3c).
6. Make sharp and deep exhalation.
7. Open eyes and resume breathing.

Please make sure before use of the gas mask that breath is hold and eyes are closed. It must be done necessarily, because one can be gassed with modern poisoning agents even within short time of putting the gas mask on. After strong exhalation substances inside the mask are removed from the gas mask and only then eyes may be opened. After use of the gas mask it is necessary to wash the mask and to dry it up.